




TECH TIP: TV REMOVAL & ATTACHMENT (NO TOOLS NEEDED)

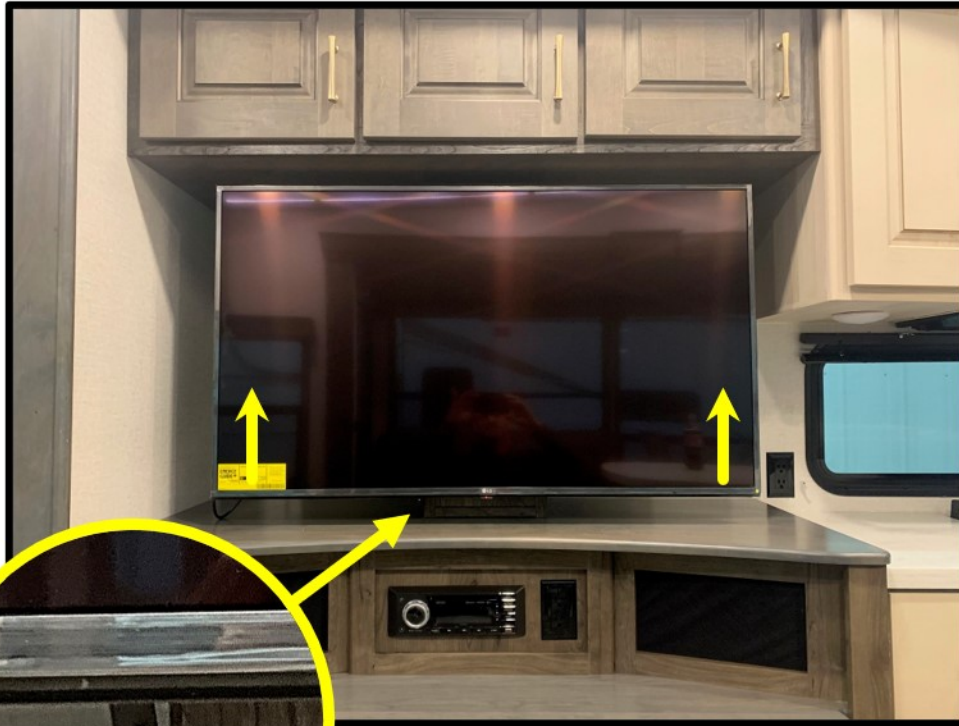

RELEASE LEVER

Push "RELEASE LEVER" to the right and firmly lift up from bottom of TV to release from the mount.



KEYHOLE

4 Mounting screws on back of TV fit into top of the bracket "KEYHOLES". Firmly push down on TV to secure. You will hear a light click as the "RELEASE LEVER" catches.