


Quick Reference Torque Guide

Pin Box




A: 135 ft-lbs (15-16" Socket)
B: 80 ft-lbs (3/4" Socket)

[Rota-Flex™ Pin Box Installation and Owner's Manual](#)

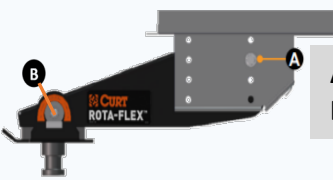

A: 135 ft-lbs (15/16" Socket)
B: 80 ft-lbs (3/4" Socket)


[Rota-Flex™ Pin Box Installation and Owner's Manual](#)

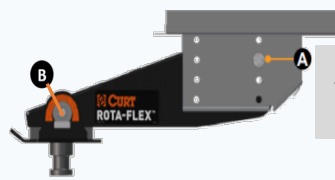

A: 135 ft-lbs (15/16" Socket)
B: 80 ft-lbs (3/4" Socket)


[Rota-Flex™ Pin Box Installation and Owner's Manual](#)

Wheel Lug Nuts

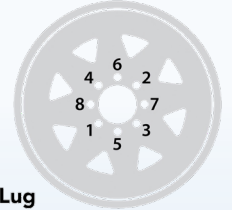


8 Lug

120 ft-lbs
(3/4" Socket)
See torque pattern

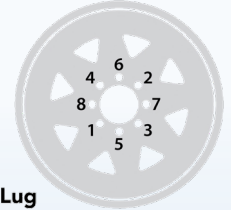

8 Lug

120 ft-lbs
(3/4" Socket)
See torque pattern

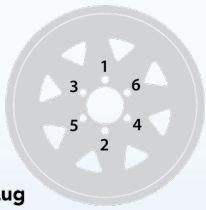

6 Lug

120 ft-lbs
(3/4" Socket)
See torque pattern

CRE3000 Heavy Duty Shackles/Wet Bolts



Shackle links and all nuts to 40 ft-lbs (11/16" Socket & 13/16" Wrench)

[CRE3000 TANDEM INSTALLATION INSTRUCTIONS](#)




Shackle links and all nuts to 40 ft-lbs (11/16" Socket & 13/16" Wrench)

[CRE3000 & Wet Bolt Kit Installation Video](#)




Shackle links and all nuts to 40 ft-lbs (11/16" Socket & 13/16" Wrench)

Spring U-Bolts, Tie Plates & Nuts

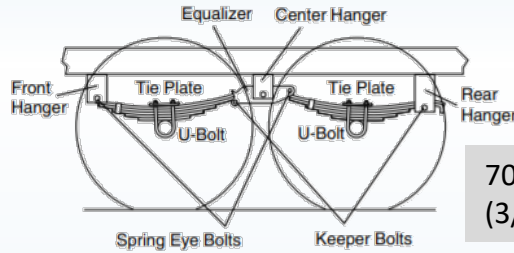


70-80 ft-lbs
(3/4" Socket)

[Dexter Operation & Service manual](#)

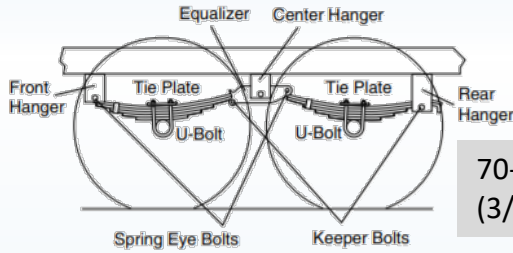

70-80 ft-lbs
(3/4" Socket)

[Dexter Operation & Service manual](#)

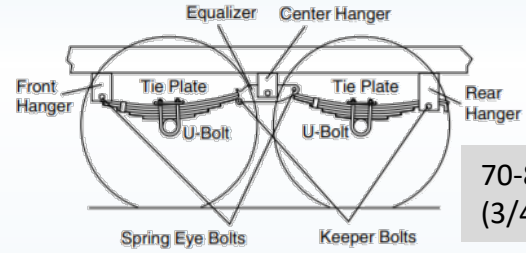

70-80 ft-lbs
(3/4" Socket)


[Dexter Operation & Service manual](#)

Landing Gear Jack Bolts




52-64 ft-lbs
(3/4" Socket)

[Level Up™ Installation and Owner's Manual](#)

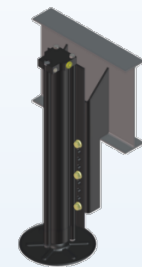

52-64 ft-lbs
(3/4" Socket)

[Level Up™ Installation and Owner's Manual](#)

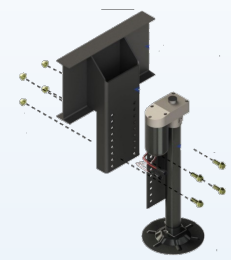

90 ft-lbs
(3/4" Socket)

[Ground Control® 3.0 4- 6 Point OEM INSTALLATION MANUAL](#)